

MAHLE


CONFLUENCE



MAHLE BATTERY

Your Salsa Confluence uses a MAHLE 250Wh battery. This battery requires proper care for optimum performance and longevity. Your battery should come properly charged from your Salsa retailer, but we recommend following these steps upon receiving your Confluence:

- Check the battery's charge.
 - o Turn on your bike by pressing the button on the iWOC ONE top tube controller.
 - o The button will light up to indicate battery charge level:

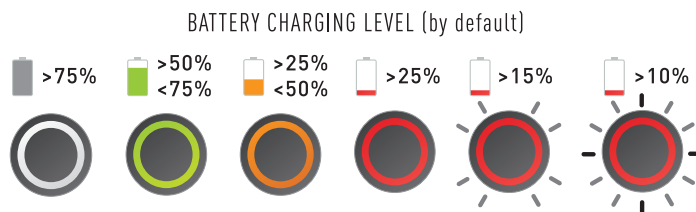

- o If the battery charge level is below 25%, we recommend charging your ebike.
 - o If you will be storing your ebike for weeks or months, MAHLE recommends keeping the battery between 30% and 60% charged. This will avoid accelerated battery deterioration.
 - o If your bike does not turn on or does not charge when plugged in, please contact your Salsa retailer.
- Follow these guidelines for better battery longevity:
 - o Avoid storing your ebike in temperatures above 77 F (25 C), in humid conditions, or in cold temperatures for extended periods of time.
 - o Do not store your ebike long-term with a charge below 30% or above 90%.
 - o During long-term storage, check the battery charge at least every six months to ensure it is between 30% and 90%, as the battery will discharge over time.
 - o If battery is depleted to 0%, charge it as soon as possible. Your ebike may take a while to turn on if the battery has been fully depleted.
 - o Never clean your ebike with pressurized water. Use a damp cloth or soap and a soft brush; rinse gently.
 - o Do not leave your ebike connected to the charger for longer than five hours at a time.

Additional resources:

[MAHLE battery care guide](#)

[MAHLE iWoc ONE controller user guide](#)

